


DSXi Users Guide and Quick Start Guide Addendum New DDC-EDID Transmission Feature

On the Local Unit (connected to the PC)

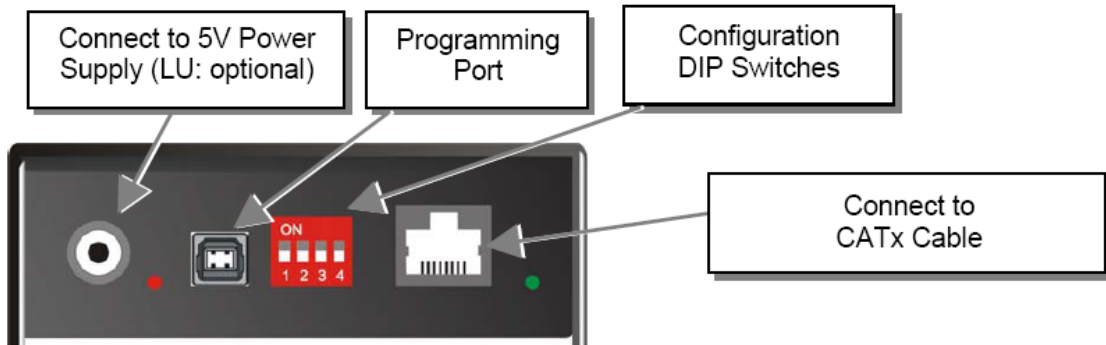

DIP Switch Position	Function
	Monitor Resolution: Automatic control (Default)
	Monitor Resolution: up to 1280x1024
	Monitor Resolution: larger than 1280x1024
	Configuration for Maximum Distance transmission, independent of Monitor Resolution
	DDC Transmission blocked (Both Local and Remote Dip Switch must be OFF to block DDC transmission)
	DDC Transmission enabled
	Normal operation
	Testimage

☐ = Switch down ☐ = Switch up ☐ = Switch not relevant

Solicit DDC transmission by hotkey command:

- Press <LSHIFT> twice (like a double-click) to enter command mode.
 - The LEDs of your keyboard are blinking now.
- Press <2><RETURN> to solicit DDC transmission
 - DDC transmission starts. Video LED is flashing at both Local Unit and Remote Unit
 - The LEDs of your keyboard stop blinking.

Block DDC transmission by hotkey command:

- Press <LSHIFT> twice (like a double-click) to enter command mode.
 - The LEDs of your keyboard are blinking now.
- Press <1><RETURN> to block DDC transmission.
 - DDC transmission is blocked.
 - The LEDs of your keyboard stop blinking.

In General:

The user should bring all DIP switches into OFF position and try a DDC transmission by Hotkey command.